

Removing your Single Hung Screen




1. Lift screen frame by pull tabs and pull towards you. The screen will now be free.



3. Fully lift window sash.



5. Align top of screen. Push screen frame up and back into place.

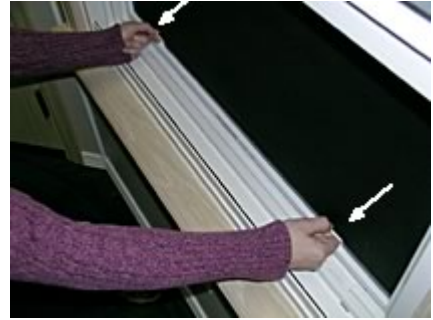

2. Grab screen by pull tabs.



4. Reinserting your Single Hung Screen




6. Make sure screen frame is secure in place behind clips.

Removing your Double Hung Screen



1. Lift bottom sash as high as possible.

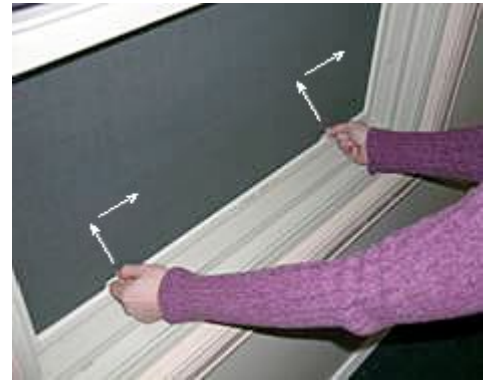

2. Lift screen frame by pull tabs and shift screen right or left.



3. Push screen frame out, while holding onto the pull tabs.



4. Pull screen frame down.



5. When pulling the screen frame down, it may be easier to hold onto both sides of the screen.



6. Screen frame will now be out, pull screen frame through window at angle.

Reinserting a Double Hung Screen



1. Reinsert screen with springs at top of screen frame.



2. Maneuver screen frame into the track on either side of window frame.



3. Insert one side and then adjust the other to fit into the frame. Pulling down the top sash may help to see better.



4. Use pull tabs to pull back into track, it may be easier to pull in left then right or vice versa.

Removing your Single Slider Screen



1. Fully slide window open.



2. Grab screen frame by pull tabs.



3. Lift up and pull screen towards you.



4. Screen will now be detached from window.

Reinserting your Single Slider Screen



1. Align side of screen with window frame, push screen frame behind clips.



2. Make sure screen frame is behind clips around screen frame. Check to see that screen frame is secure in place.

Removing your Double Slider Screen



1. Open both sashes towards the center to expose pull tabs.



2. Lift screen frame by pull tabs and shift right or left.



3. Push screen frame out once side at a time and gently pull down.



4. It is easiest to pull screen from frame at an angle.



5. Push sliders to one side and pull screen frame through opening.

Reinserting your Double Slider Screen



1. Reinsert screen with springs at top of screen frame.



2. Insert top corners at an angle and slide.



3. Once screen is at an angle and in track, slowly slide top corner to edge.



4. Once corner is in, use pull tabs to push screen frame down, make sure screen frame is secure.

Removing your Casement and Awning Screens



1. Casement or Awning window with screen in window



2. Locate slide pin and slide all slide pins to center.



3. Lift or pull screen out by pull tabs.



4. Screen should now be out of window.

Reinstalling your Casement and Awning Screens



1. Realign screen frame in window. The awning may be inserted bottom first.



2. Push side pins back into place.